


Quick-Start-Guide STKa57xx

Arm® architecture



VISIT OUR SUPPORT WIKI
support.tq-group.com

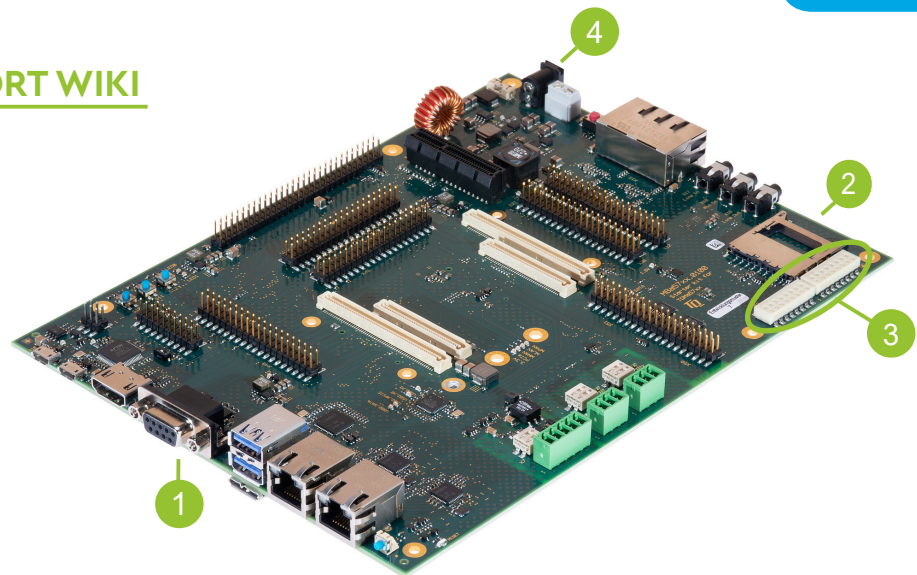

i Hardware Setup

- 1 Debug/Serial
- 2 SD-Card
- 3 DIP-Switches
- 4 Power

CONNECT STARTERKIT TO HOST PC

Connect STKa57xx using the provided Micro USB cable to connect interface X4 to a USB port on the host. A USB serial driver might be required on the host to operate with the Starterkit. Detailed instructions are available on the STK Quicksteps Wiki page.

RUN TERMINAL EMULATOR AND CONFIGURE SERIAL PORT

After connecting the STKa57xx, one new serial port is available on the host. This port is for the U-Boot / Linux serial debug console.

A terminal emulator is required on the host (Tera Term is recommended). Configure the serial port using the settings from the table on the right.

Baudrate	115200
Data Bits	8
Parity	none
Stop Bits	1
Handshake	XON / XOFF

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X18 on the STKa57xx.

Caution when using a different power supply!

The Starterkit has a wide range input from **15V** to **30V** and is designed to operate with a regulated power supply.

ESTABLISH SERIAL CONNECTION

The bootloader and operating system outputs are displayed in the terminal. Once the boot process is complete, log in to the system using the default user "root" without a password.

Quick-Start-Guide STKa57xx



Arm® architecture





Boot device selection

The boot device must be selected with DIP switches **S1** and **S2** accordingly.
By default, the STKa57xx starts in SD card configuration.



Configuration SD card

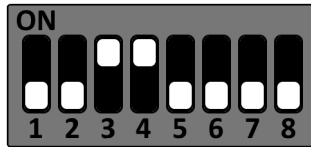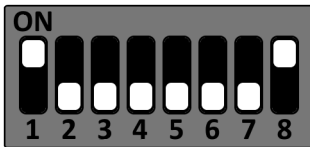

Configuration eMMC

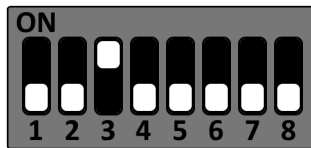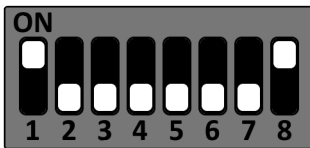

Configuration FlexSPI

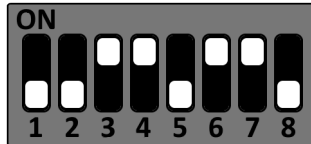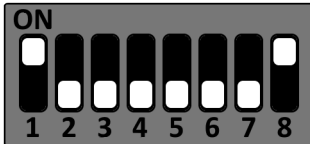

For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/arm-architecture/tqma57xx
support.tq-group.com/tqma57xx

Visit our Website:

tq-group.com/en/products/tq-embedded

CREATE A TICKET

Via the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

