


# Quick-Start-Guide STKa65xx

## Arm® architecture



VISIT OUR SUPPORT WIKI  
[support.tq-group.com](https://support.tq-group.com)

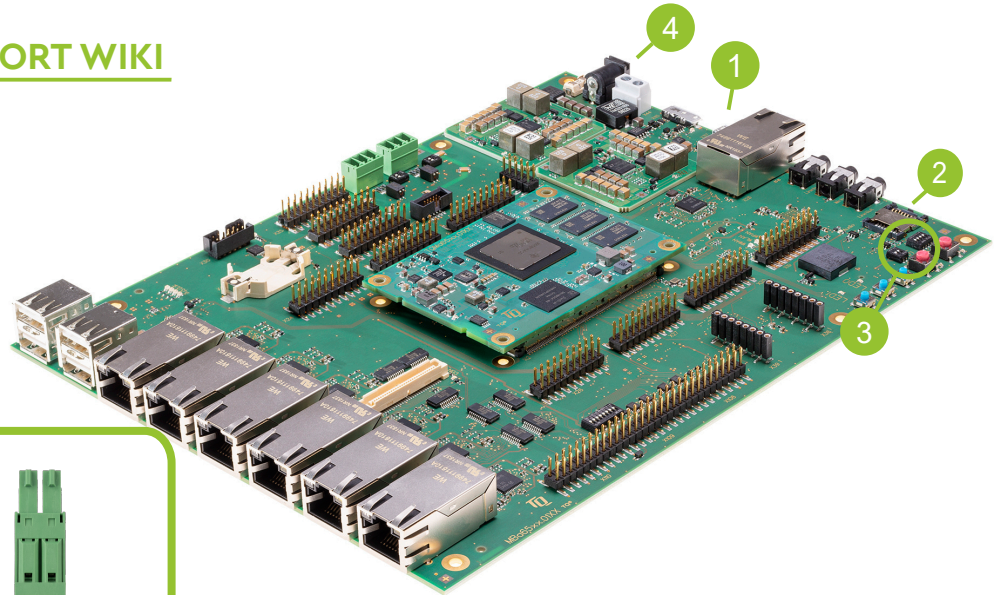

### i Hardware Setup

- 1 Debug/Serial
- 2 SD-Card
- 3 DIP-Switches
- 4 Power



**Power Adapter**  
Not required with all carrier boards

## CONNECT STARTERKIT TO HOST PC

Connect STKa65xx using the provided Micro USB cable to connect interface X37 to a USB port on the host. A USB serial driver might be required on the host to operate with the Starterkit. Detailed instructions are available on the STK Quicksteps Wiki page.

## RUN TERMINAL EMULATOR AND CONFIGURE SERIAL PORT

After connecting the STKa65xx, two new serial ports are available on the Host. The second port is the U-Boot / Linux serial debug console.

A terminal emulator is required on the Host (Tera Term is recommended). Configure the serial port using the settings from the table on the right.

<b>Baudrate</b>	115200
<b>Data bits</b>	8
<b>Parity</b>	none
<b>Stop Bits</b>	1
<b>Handshake</b>	XON / XOFF

## SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X45 on the STKa65xx.

Caution when using a different power supply!

The Starterkit has a wide range input from **16V** to **32V** and is designed to operating with a regulated power supply.

## ESTABLISH SERIAL CONNECTION

The bootloader and operating system outputs are displayed in the terminal. Once the boot process is complete, log in to the system using the default user "root" without a password.

# Quick-Start-Guide STKa65xx



## Arm® architecture




### Boot device selection

The boot device must be selected with DIP switches **S8** and **S9** accordingly.  
By default, the STKa65xx starts in SD card configuration.


#### Configuration SD card

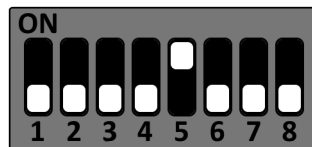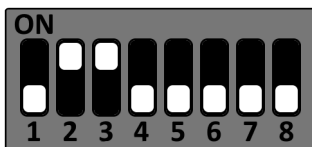

#### Configuration eMMC

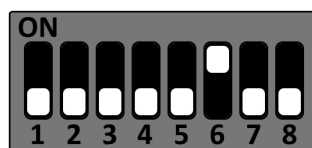

#### Configuration FlexSPI

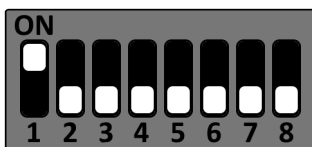

**!** For latest documentation, BSPs, etc. please visit:  
[tq-group.com/en/products/tq-embedded/arm-architecture/TQMa65xx](https://tq-group.com/en/products/tq-embedded/arm-architecture/TQMa65xx)  
[support.tq-group.com/TQMa65xx](https://support.tq-group.com/TQMa65xx)

Visit our Website:  
[tq-group.com/en/products/tq-embedded](https://tq-group.com/en/products/tq-embedded)

Visit the Quicksteps Page to get started:  
[https://support.tq-group.com/en/arm/tqma65xx/mba65xx/stk\\_quicksteps](https://support.tq-group.com/en/arm/tqma65xx/mba65xx/stk_quicksteps)

### CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.  
[support.tq-group.com/helpdesk](https://support.tq-group.com/helpdesk)

