


Quick-Start-Guide STKa8MPxL

Arm® architecture

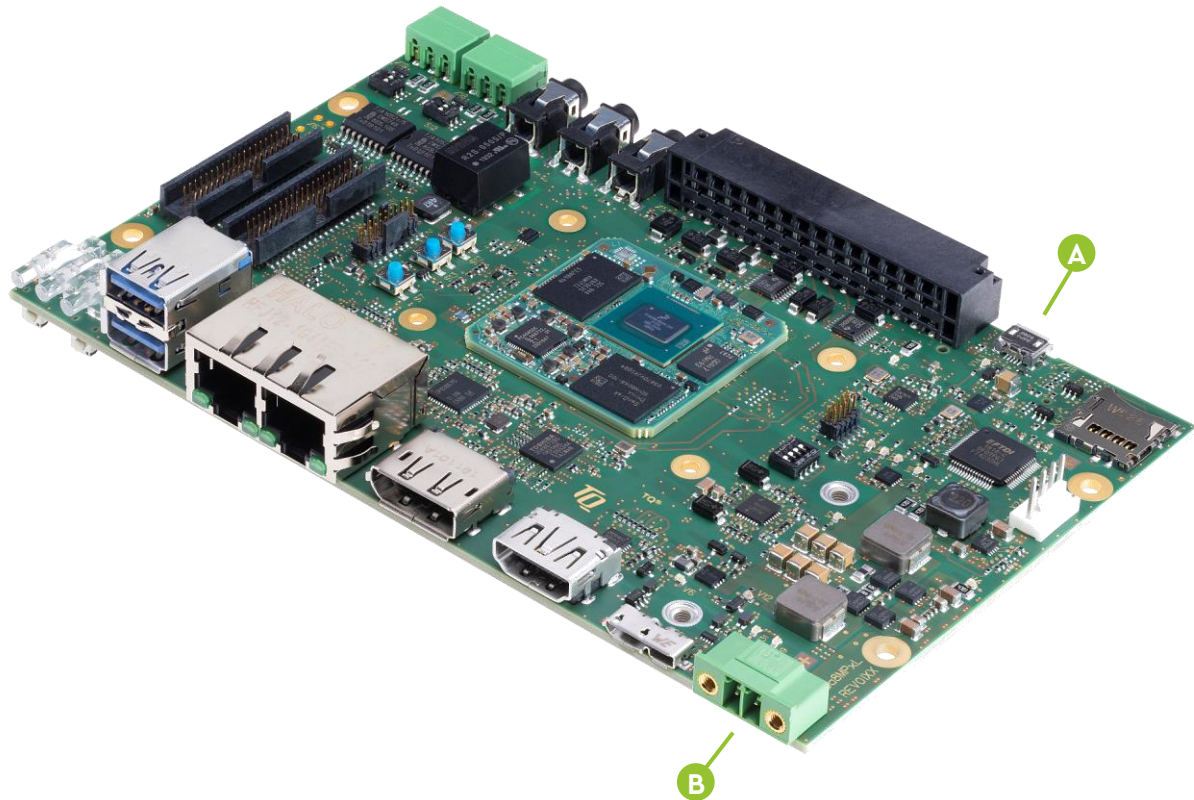

A

CONNECT HOST PC AND STKa8MPxL

Use the supplied micro USB cable to connect X28 of the MBa8MPxL to a USB port on your host. You will find several new serial ports on the host PC. The last one should be the debug port.

RUN TERMINAL EMULATOR AND CONFIGURE SERIAL PORT

Run your favourite terminal emulator on the host PC (we Recommend Tera Term Pro) and configure the serial port as follows:

Baudrate	115200
Data bits	8
Parity	none
Stop bits	1
Handshake	XON / XOFF

B

SUPPLY THE STKa8MPxL WITH POWER

Double-check the mains voltage required for the included Power supply, then connect it to connector X13 on the MBa8MPxL.

Caution when using a different power supply! The Starterkit Can be operated using a regulated supply voltage of 16-26V (nom. 24V)!

ESTABLISH SERIAL CONNECTION

The boot messages of boot loader and operating system are displayed by the terminal emulator. When the kit has fully booted you can log in to the system with the username *root*.

! For latest documentation, BSPs, etc. please visit: tq-group.com/en/products/tq-embedded/arm-architecture/stka8mpxl support.tq-group.com/tqma8mpxl

Quick-Start-Guide STKa8MPxL

Arm® architecture



Boot device selection

To select the desired boot device set DIP switch **S1** accordingly.

Configuration SD Card

S1				
DIP	1	2	3	4
Set	ON	ON	OFF	OFF

Configuration eMMC

S1				
DIP	1	2	3	4
Set	OFF	ON	OFF	OFF

Configuration FlexSPI

S1				
DIP	1	2	3	4
Set	OFF	ON	ON	OFF