


Quick-Start-Guide STKx120

x86® architecture

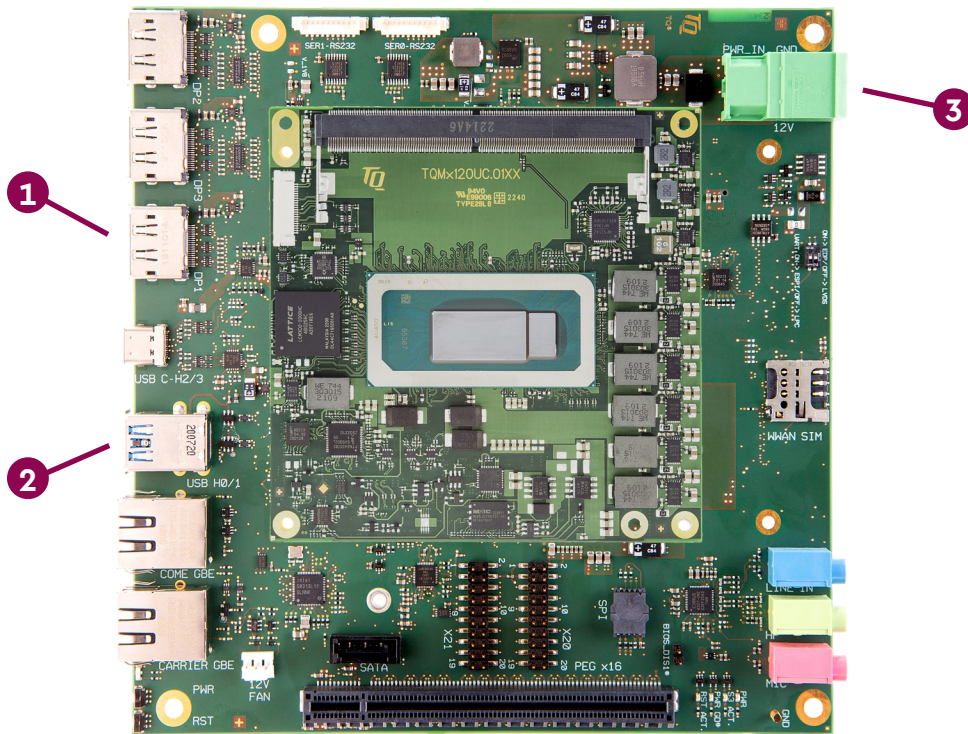

1 CONNECT EXTERNAL DISPLAY

Use DisplayPort connector X3 on the MB-COME6-4 to connect an external display (e.g. monitor).

2 CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port available on the MB-COME6-4.

3 SUPPLY THE STKx120 WITH POWER

Double-check the mains voltage required for the included Power supply, then connect it to connector X10 on the MB-COME6-4. Caution when using a different power supply! The Starterkit can be operated using a regulated supply voltage of **12V!**

4 ACCESSING THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.

! For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/stkx120uc
tq-group.com/en/products/tq-embedded/x86-architecture/stkx120hc
tq-group.com/en/products/tq-embedded/x86-architecture/stkx120pc

support.tq-group.com/TQMx120