


Quick-Start-Guide STKx120

x86® architecture



VISIT OUR SUPPORT WIKI
support.tq-group.com

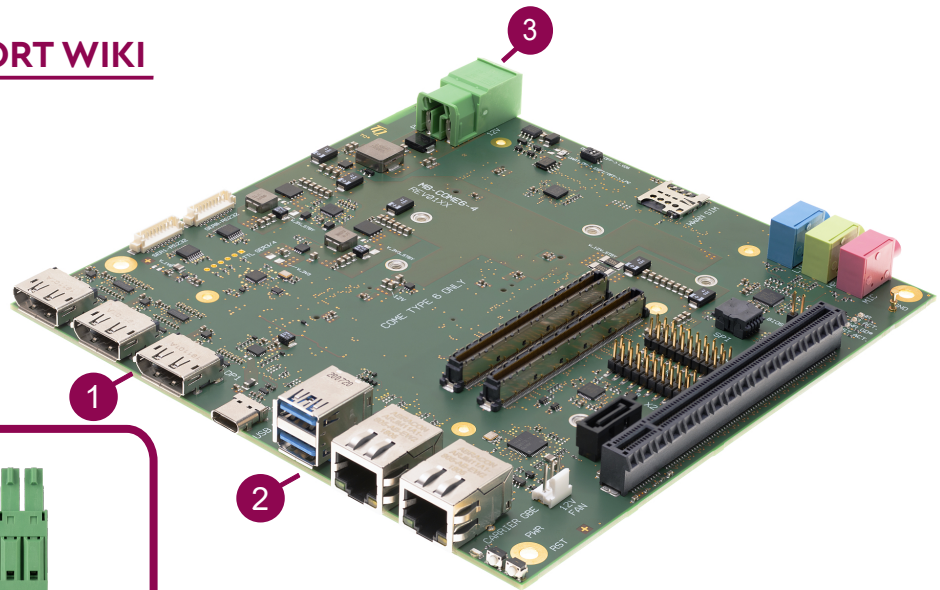

i Hardware Setup

- 1 HDMI/DP-connector
- 2 USB-Port
- 3 Power



Power Adapter
Not required with all carrier boards

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X3 (DisplayPort), X4 (DisplayPort) or X5 (DisplayPort).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKx120.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X10 on the STKx120.

Caution when using a different power supply!

The Starterkit requires an input of **12V** and is designed to operating with a regulated power supply.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/tqmx120uc
tq-group.com/en/products/tq-embedded/x86-architecture/tqmx120hc
tq-group.com/en/products/tq-embedded/x86-architecture/tqmx120pc
support.tq-group.com/tqmx120

CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

