


Quick-Start-Guide STKx120

x86® architecture



VISIT OUR SUPPORT WIKI
support.tq-group.com

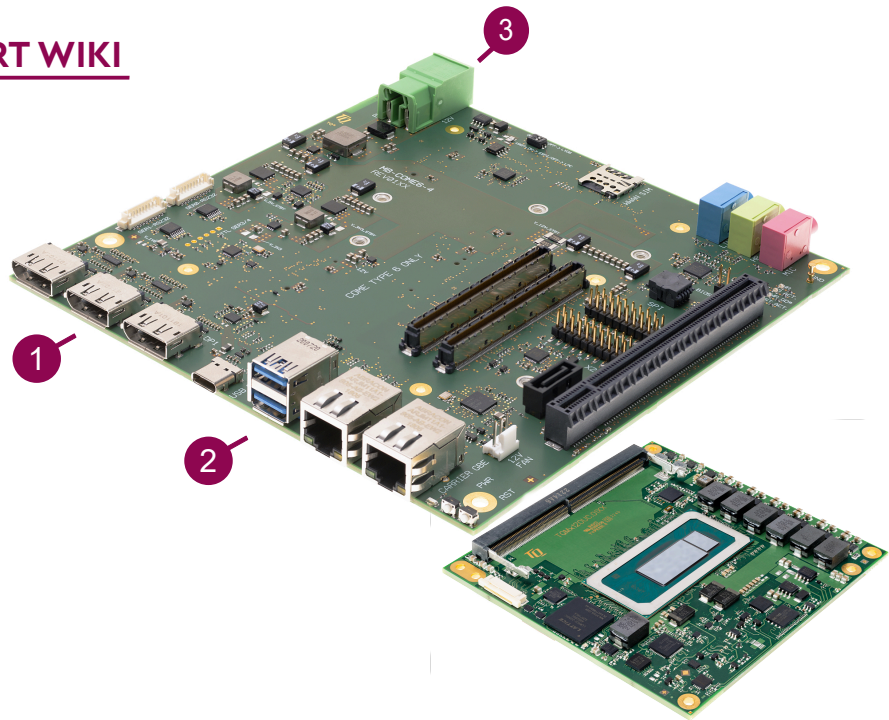

i

Hardware Setup

1

DP-connector

2

USB-Port

3

Power

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X3 (DisplayPort), X4 (DisplayPort) or X5 (DisplayPort).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKx120.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X10 on the STKx120.

Caution when using a different power supply!

The Starterkit requires an input of **12V** and is designed to operate with a regulated power supply.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/tqmx120uc
tq-group.com/en/products/tq-embedded/x86-architecture/tqmx120hc
tq-group.com/en/products/tq-embedded/x86-architecture/tqmx120pc
support.tq-group.com/tqmx120

CREATE A TICKET

Via the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

