


Quick-Start-Guide STKx130

x86® architecture



VISIT OUR SUPPORT WIKI
support.tq-group.com

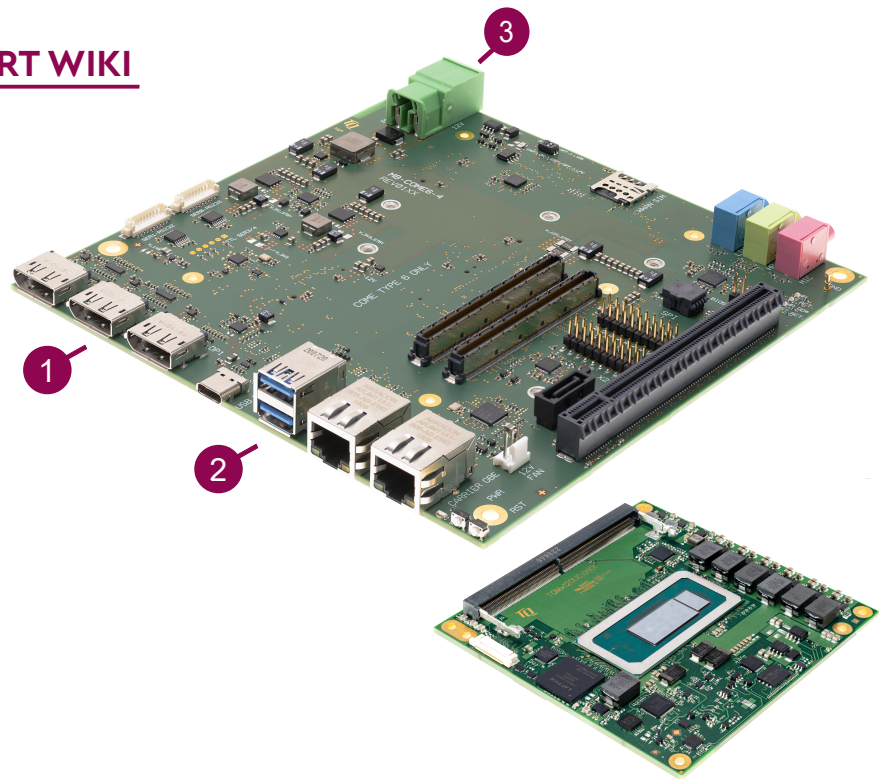

- i** Hardware Setup
- 1** DP-connector
 - 2** USB-Port
 - 3** Power

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X3 (DisplayPort), X4 (DisplayPort) or X5 (DisplayPort).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKx130.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X10 on the STKx130.

Caution when using a different power supply!

The Starterkit has a wide range input from **12V** and is designed to operate with a regulated power supply.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/tqmx130uc
tq-group.com/en/products/tq-embedded/x86-architecture/tqmx130hc
tq-group.com/en/products/tq-embedded/x86-architecture/tqmx130pc
support.tq-group.com/tqmx130

CREATE A TICKET

Via the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

