


Quick-Start-Guide STKx60EB

x86® architecture



[VISIT OUR SUPPORT WIKI](https://support.tq-group.com)
support.tq-group.com

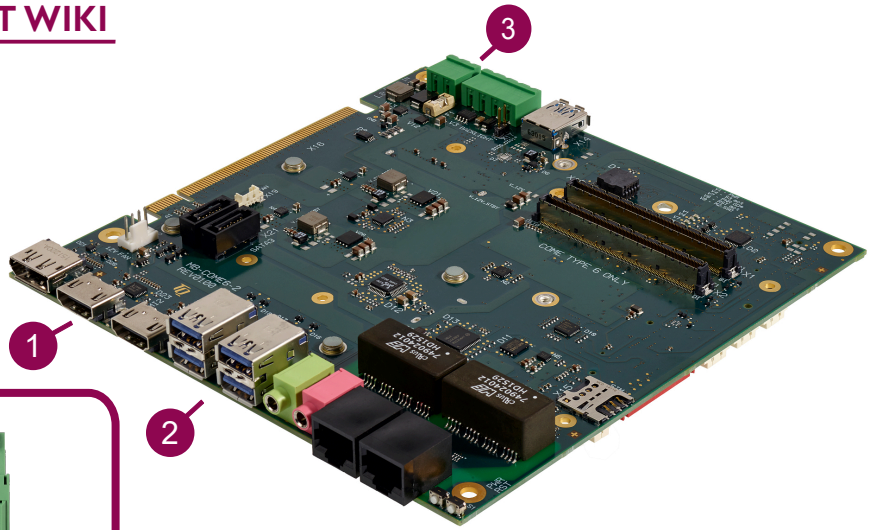

i Hardware Setup

- 1 HDMI/DP-connector
- 2 USB-Port
- 3 Power



Power Adapter
Not required with all carrier boards

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X5 (HDMI), X4 (HDMI) or X3 (DisplayPort).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKx60EB.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X12 on the STKx60EB.

Caution when using a different power supply!

The Starterkit requires an input of **12V** and is designed to operating with a regulated power supply.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/tqmx60eb
support.tq-group.com/tqmx60eb

CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

