


# Quick-Start-Guide STKx80UC

## x86® architecture




[VISIT OUR SUPPORT WIKI](https://support.tq-group.com)  
[support.tq-group.com](https://support.tq-group.com)

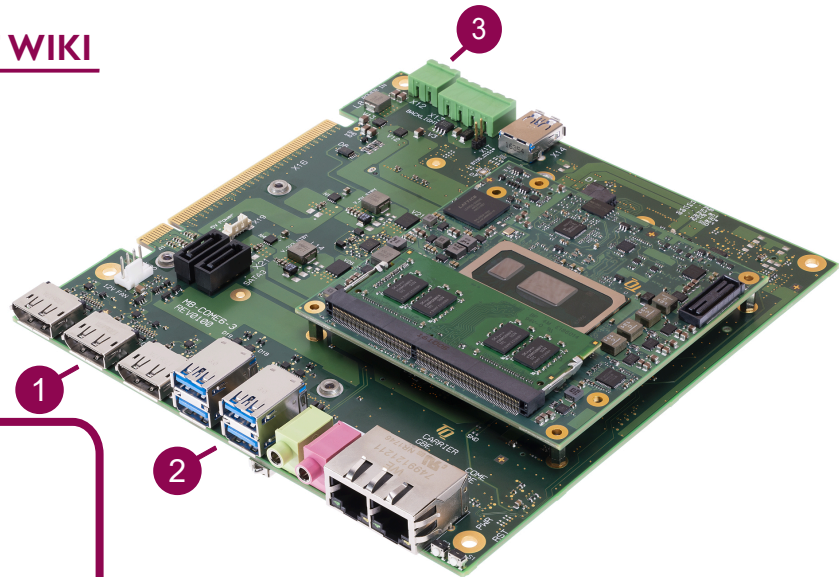

**i** Hardware Setup

- 1 HDMI/DP-connector
- 2 USB-Port
- 3 Power



**Power Adapter**  
Not required with all carrier boards

### CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X4 (DisplayPort) or X5 (DisplayPort).  
Connector X3 cannot be used

### CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKx80UC.

### SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X18 on the STKx80UC.

Caution when using a different power supply!

The Starterkit requires an input of **12V** and is designed to operating with a regulated power supply.

### ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



### For latest documentation, BSPs, etc. please visit:

[tq-group.com/en/products/tq-embedded/x86-architecture/tqmx80cu](https://tq-group.com/en/products/tq-embedded/x86-architecture/tqmx80cu)  
[support.tq-group.com/tqmx80cu](https://support.tq-group.com/tqmx80cu)

### CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

[support.tq-group.com/helpdesk](https://support.tq-group.com/helpdesk)

