


Quick-Start-Guide STKx80UC

x86 Architecture

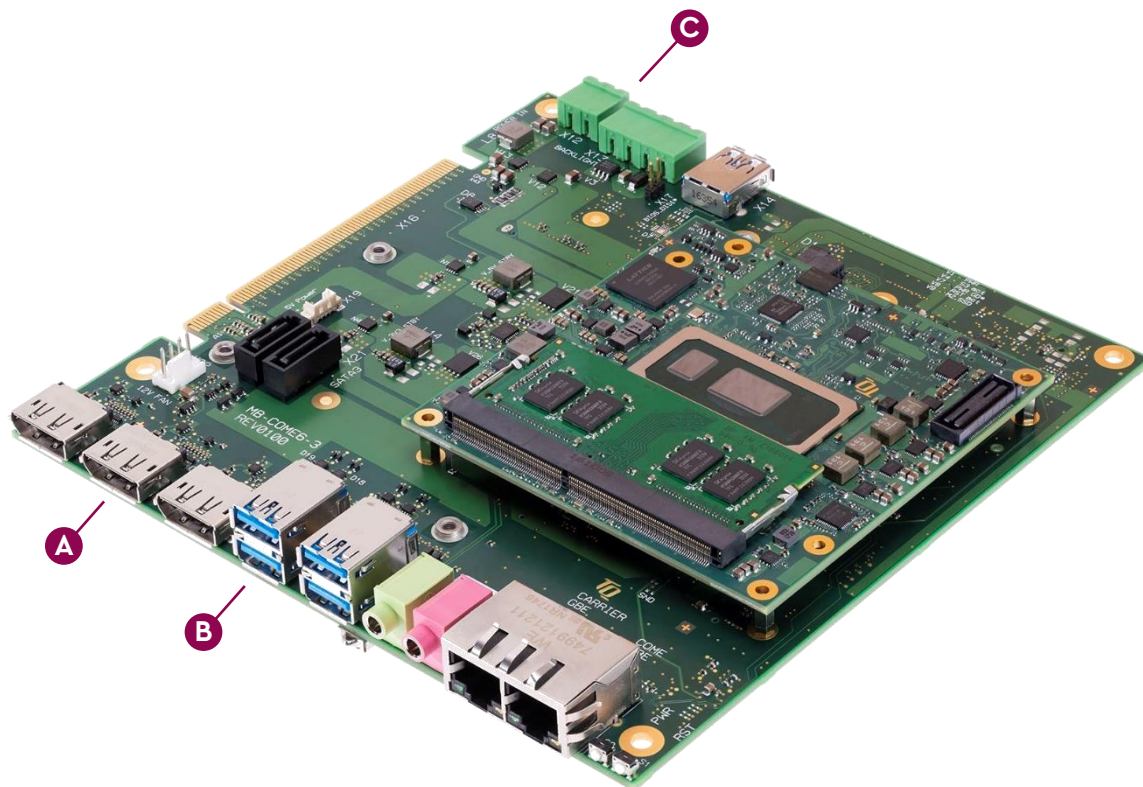

A

CONNECT EXTERNAL DISPLAY

Use DisplayPort connector X4 on the MB-COME6-3 to connect an external display (e.g. monitor). Attention: X3 cannot be used.

B

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port available on Connector X6 so that you are able to navigate in the UEFI/BIOS menu or in the OS.

C

SUPPLY THE STKx80UC WITH POWER

Double-check the mains voltage required for the included power supply (100V...240V), then connect it to connector X12 on the MB-COME6-3 using the included power adapter cable.

Caution when using a different power supply!
The Starterkit requires a regulated supply voltage of 12 V!

D

ACCESSING THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.

!

For latest documentation, Drivers, etc. please visit:

[tq-group.com/en/products/tq-embedded/x86-architecture/tqmx80uc](https://www.tq-group.com/en/products/tq-embedded/x86-architecture/tqmx80uc)

support.tq-group.com/tqmx80uc