


Quick-Start-Guide STKxCU1

x86® architecture

 


[VISIT OUR SUPPORT WIKI](https://support.tq-group.com)
support.tq-group.com

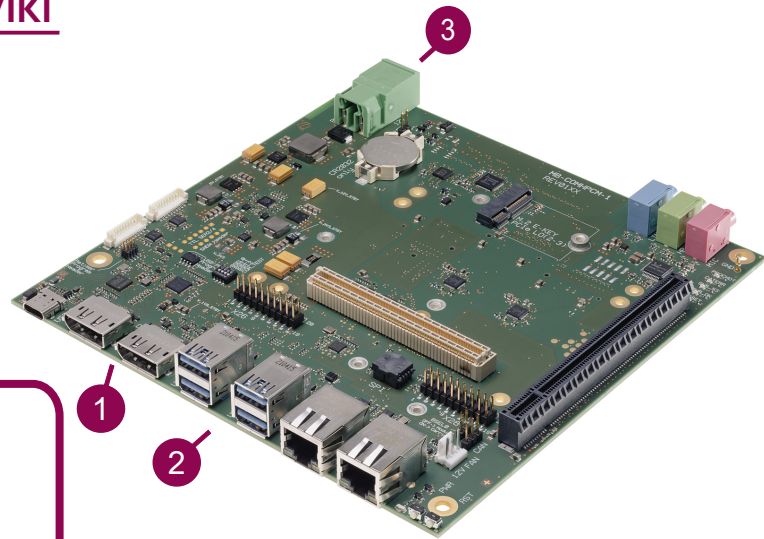

i Hardware Setup

- 1 HDMI/DP-connector
- 2 USB-Port
- 3 Power



Power Adapter
Not required with all carrier boards

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X3 (DisplayPort) or X4 (DisplayPort).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKxCU1.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X10 on the STKxCU1.

Caution when using a different power supply!

The Starterkit requires an input of **12V** and is designed to operating with a regulated power supply.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/tqmxcu1
support.tq-group.com/tqmxcu1

CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

