


# Quick-Start-Guide STKxE39S

## x86® architecture



[VISIT OUR SUPPORT WIKI](https://support.tq-group.com)  
[support.tq-group.com](https://support.tq-group.com)

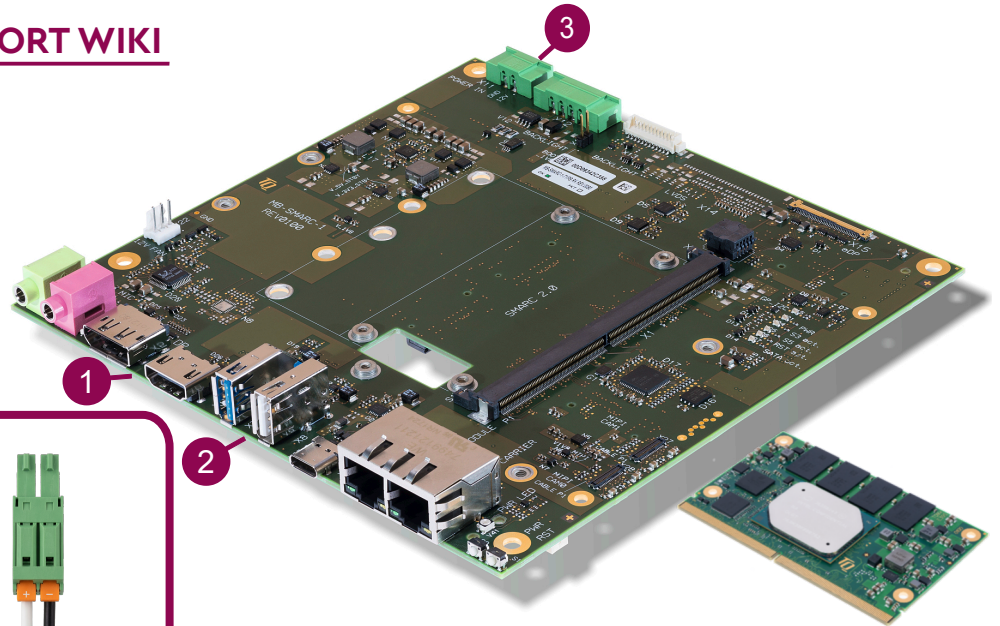

### i Hardware Setup

- 1 HDMI/DP-connector
- 2 USB-Port
- 3 Power



Power Adapter  
Not required with all carrier boards

### CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X5 (DisplayPort) or X6 (HDMI).

### CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKxE39S.

### SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X11 on the STKxE39S.

Caution when using a different power supply!

The Starterkit is designed to operating with a regulated power supply of **12V**.

### ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



### For latest documentation, BSPs, etc. please visit:

[tq-group.com/en/products/tq-embedded/x86-architecture/TQMxE39S](https://tq-group.com/en/products/tq-embedded/x86-architecture/TQMxE39S)  
[support.tq-group.com/TQMxE39S](https://support.tq-group.com/TQMxE39S)

### CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

[support.tq-group.com/helpdesk](https://support.tq-group.com/helpdesk)

