


Quick-Start-Guide STKxE39S

x86® architecture



VISIT OUR SUPPORT WIKI
support.tq-group.com

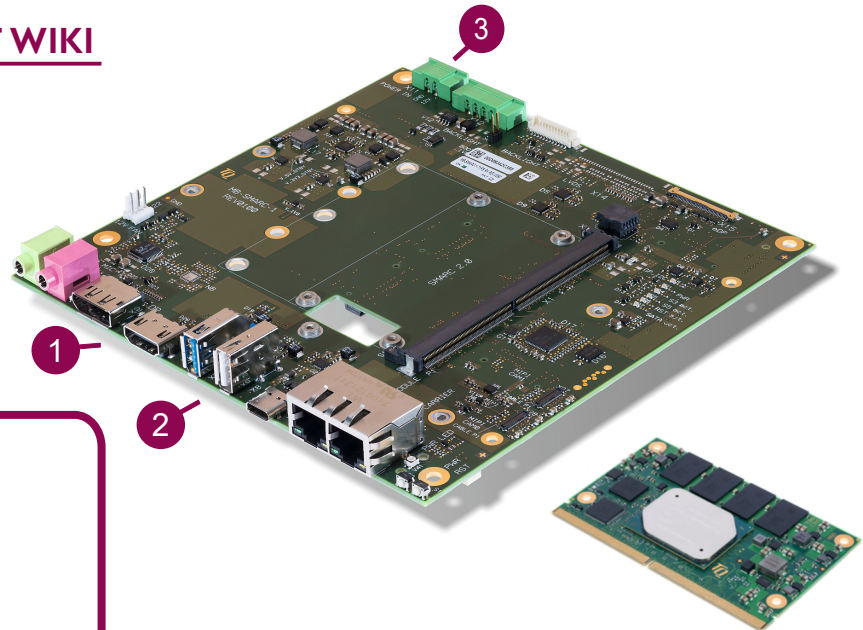

1

2

3

Hardware Setup

1

HDMI/DP-connector

2

USB-Port

3

Power



Power Adapter
Not required with all carrier boards

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X5 (DisplayPort) or X6 (HDMI).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKxE39S.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X11 on the STKxE39S.

Caution when using a different power supply!

The Starterkit requires an input of **12V** and is designed to operate with a regulated power supply.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/tqmxe39s
support.tq-group.com/tqmxe39s

CREATE A TICKET

Via the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

