


Quick-Start-Guide STKxE40C1

x86® architecture



[VISIT OUR SUPPORT WIKI](https://support.tq-group.com)
support.tq-group.com

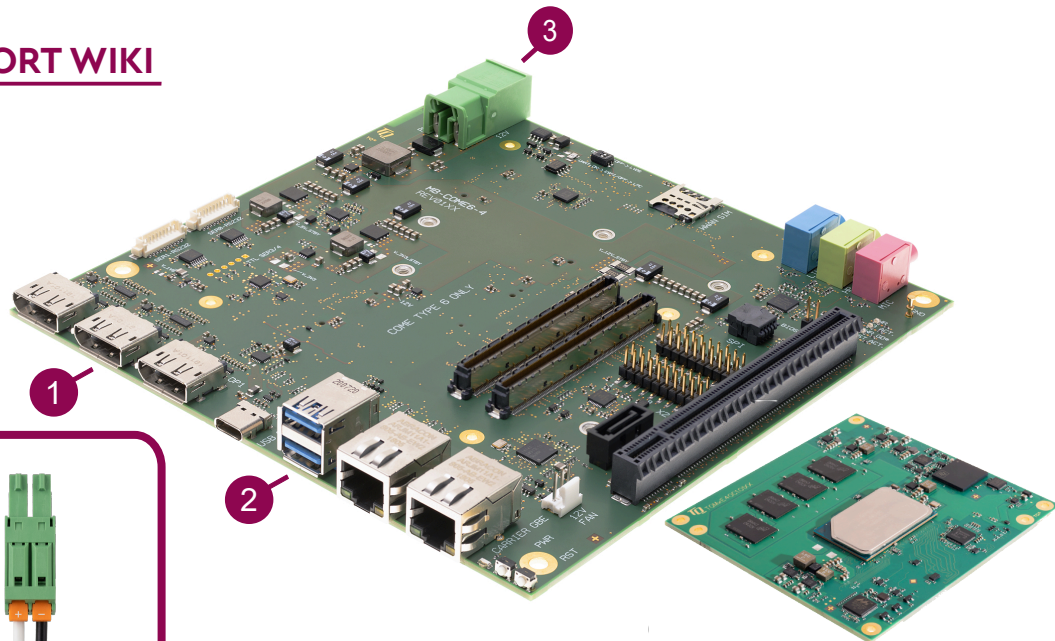

1 Hardware Setup

- 1** DP-connectors
- 2** USB-Port
- 3** Power

Power Adapter
Not required with all carrier boards

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X3 (DisplayPort), X4 (DisplayPort) or X5 (DisplayPort).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKxE40C1.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X10 on the STKxE40C1.

Caution when using a different power supply!

The Starterkit has an input of **12V** and is designed to operating with a regulated power supply.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/tqmxe40c1
support.tq-group.com/tqmxe40c1

CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

