


Quick-Start-Guide STKxE40M

x86® architecture



VISIT OUR SUPPORT WIKI
support.tq-group.com

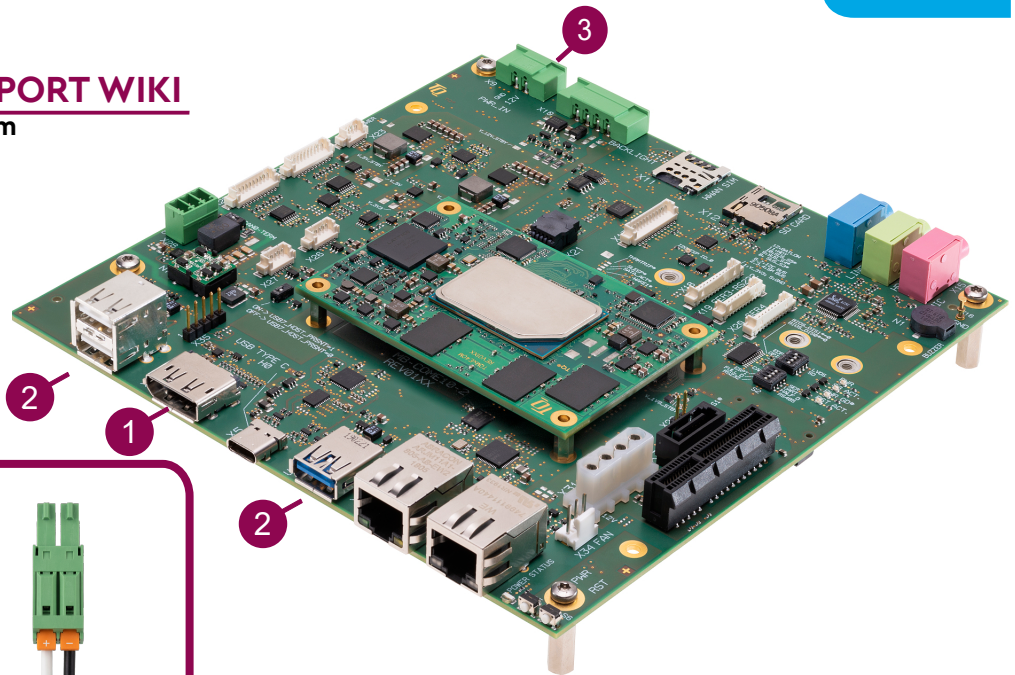

i Hardware Setup

- 1 DP-connector
- 2 USB-Port
- 3 Power



Power Adapter
Not required with all carrier boards

CONNECT STARTERKIT TO EXTERNAL DISPLAY

Connect an external display to X4 (DisplayPort).

CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port on the STKxE40M.

SUPPLY THE STARTERKIT WITH POWER

Connect the provided power supply to X9 on the STKxE40M.

Caution when using a different power supply!

The Starterkit is designed to operating with a regulated power supply of **12V**.

ACCESS THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.



For latest documentation, BSPs, etc. please visit:

tq-group.com/en/products/tq-embedded/x86-architecture/TQMxE40M
support.tq-group.com/TQMxE40M

CREATE A TICKET

Through the TQ-Embedded Helpdesk, you can easily create and manage various types of requests.

support.tq-group.com/helpdesk

