


Quick-Start-Guide TQMxE41M

x86 architecture

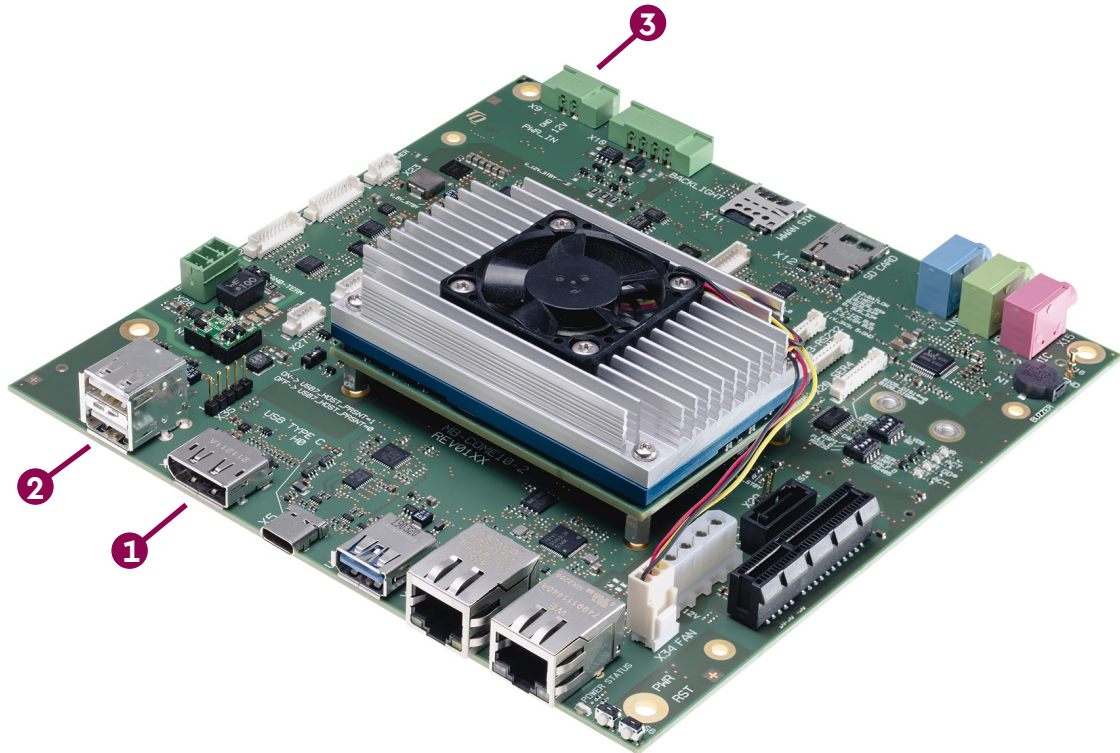

1 CONNECT EXTERNAL DISPLAY

Use DisplayPort connector X4 on the MB-COME10-2 to connect an external display (e.g. monitor).

2 CONNECT KEYBOARD AND MOUSE

Connect a keyboard and mouse to any USB port available on Connector X3 so that you are able to navigate in the UEFI menu or in the OS.

3 SUPPLY THE STKxE40S WITH POWER

Double-check the mains voltage required for the included power supply (100V...240V), then connect it to connector X9 on the MB-COME10-2 using the included power adapter cable.

Caution when using a different power supply!
The Starterkit requires a regulated supply voltage of 12 V!

4 ACCESSING THE UEFI/BIOS

In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.

! For latest documentation, Drivers, etc. please visit:

<https://www.tq-group.com/en/products/tq-embedded/x86-architecture/tqmxe41m>
support.tq-group.com/tqmxe41m