Quick-Start-Guide STKxE40C2
x86® Architecture

VISIT OUR SUPPORT WIKI
support.tq-group.com

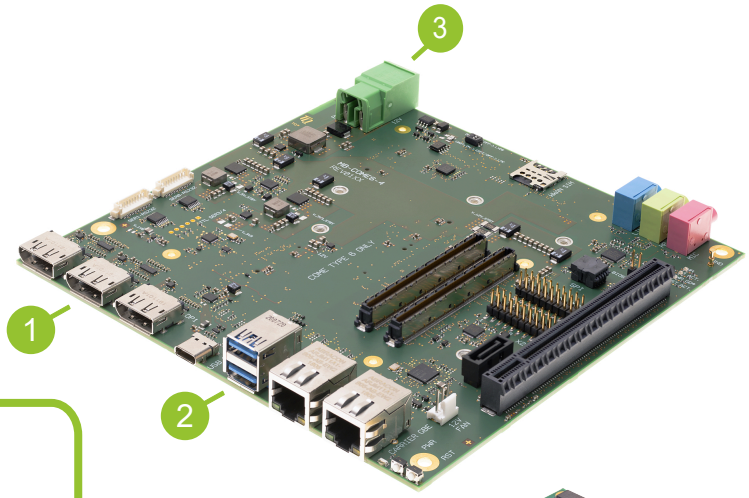

Hardware Setup

1. DP Connector
2. USB Port
3. Power

Power Adapter

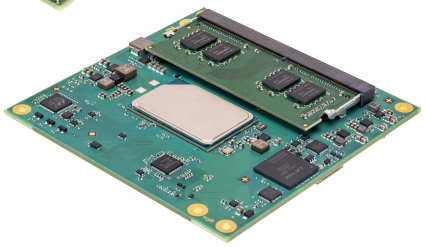

CONNECT STARTERKIT TO EXTERNAL DISPLAY
Connect an external display to X3 (DisplayPort), X4 (DisplayPort) or X5 (DisplayPort).

CONNECT KEYBOARD AND MOUSE
Connect a keyboard and mouse to any USB port on the STKxE40C2.

SUPPLY STARTERKIT WITH POWER
Connect the provided power supply to X10 on the STKxE40C2.

Caution when using a different power supply!
The Starterkit requires an input of **12V** and is designed to operate with a regulated power supply.

ACCESS UEFI/BIOS
In order to get into the UEFI/BIOS menu press "Esc" on the connected keyboard as soon as the "TQ" corporate logo appears.

For latest documentation, BSPs, etc. please visit:
https://www.tq-group.com/en/products/tq-embedded/cpu-families/x86-architecture/tqmxe40c2/
https://support.tq-group.com/en/x86/tqmxe40c2

Visit our Website:
https://www.tq-group.com/en/products/tq-embedded

CREATE A TICKET
Via the TQ-Embedded Helpdesk, you can easily create and manage various types of requests:
https://support.tq-group.com/helpdesk

Users of the Starterkit must not dispose the Kit as unsorted municipal waste, but use the collection framework available in their country for the return, recycle, or recovery of WEEE and minimize any potential effects on the environment and human health due to the presence of hazardous substances.
The Starterkit must be recycled, mechanically shredded, or incinerated without the battery.

© TQ-Systems GmbH 2026 | All data is for information purposes only | Subject to change without notice